

QuickClick CPU Holder

□ 427-1203W


■ 427-1203

■ 427-1203B


A - Installation for CPU:s with a width of 40 to 125 mm

B - Installation for wider CPU:s with a width of 125 to 185 mm


CONTENT:

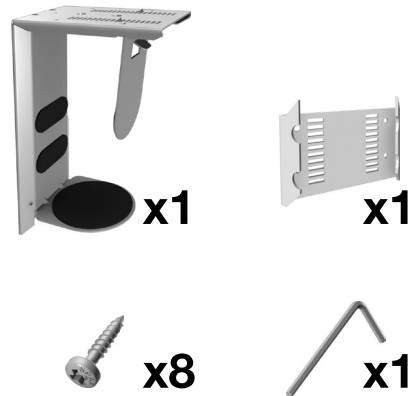


1 REMOVE SUPPORT BRACKET
As you hold down the lever, pull the support bracket until completely loose.

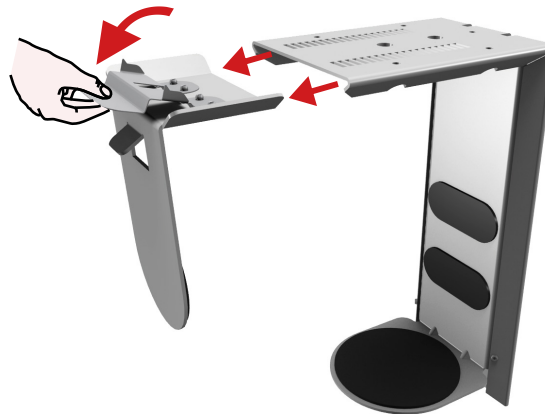

2 LOOSEN AND ADJUST
Loosen screws with allen key and adjust to desired height

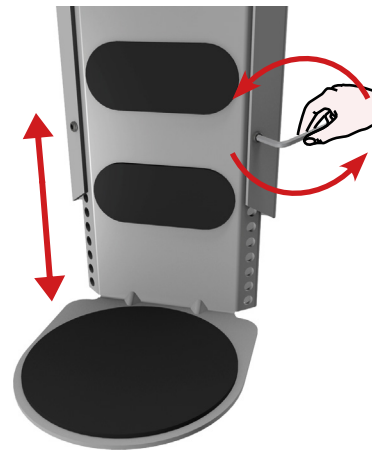

3 FIX VERTICAL POSITION
Tighten screws with allen key to secure the product's height

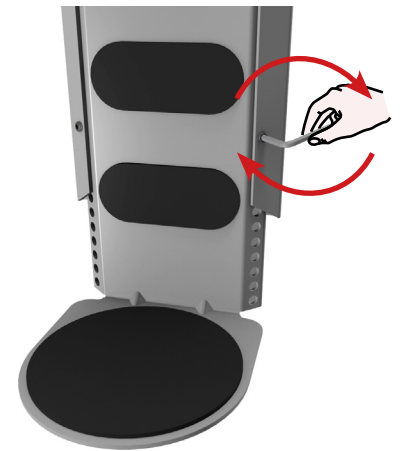


4a ATTACH CPU (40 TO 125 MM)
Using four screws, attach the CPU holder to the underside of the table.



4b ATTACH CPU (125 TO 185 MM)
For computers wider than 125 mm, attach the expansion rail to extend the product.



5 INSERT
Direct the support bracket into the rail of the CPU holder - hold the lever down and push it in. Be sure to leave space for the computer.

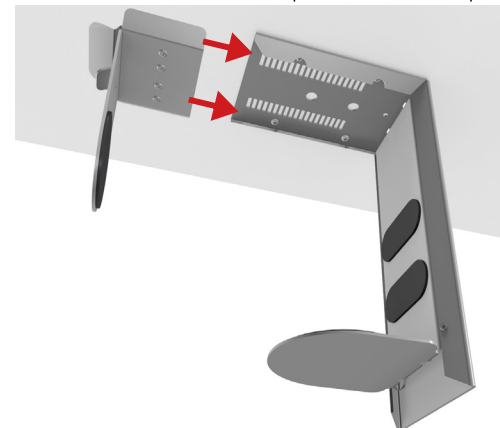

6 PLACE
Place the computer in its position and secure with supporting piece

